

## NON-SUBMERSIBLE PUMPS - BOOSTER PUMPS

## MH SERIES: 15 GPM

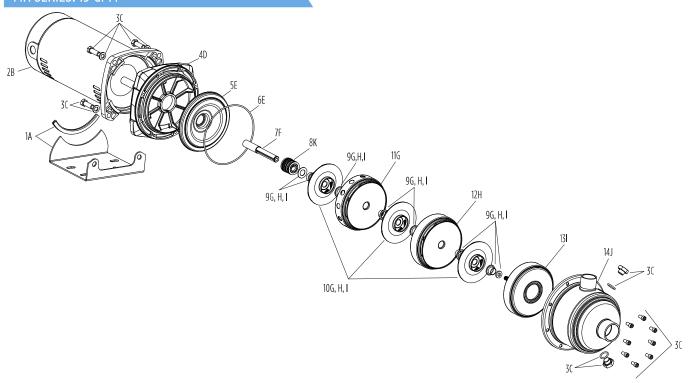


Figure No.	Description	Kit Grouping Identifier*	Repair Part Order Codes By Model No.								
			15MH05S2	15MH07S3	15MH1S4	15MH15S5	15MH2S6				
			2-Stage	3-Stage	4-Stage	5-Stage	6-Stage				
1	Base	A	305373901								
າ	Single-Phase Motor	В	305374901	305374902	305374904	305374905	305374910				
Z	Three-Phase Motor	В	305374954	305374955	305374956	305374957	305374958				
3	Fastener Kit	С	Needed fasteners are supplied with kits as required.								
4	Adaptor Flange	D	305408907								
5	Seal Plate	E	305408906								
6	O-ring	K	305408906								
7	Shaft	F	3054	21906	305408909	305408910	305408911				
8	Mechanical Seal	K	305421906								
9	Hydraulic Hardware	G, H, I	See Stage Assembly Kits								
10	Impeller	G, H, I	See Stage Assembly Kits								
11	Discharge Stage Assembly	G	305408916 305408913								
12	Intermediate Stage Assembly	Н		305408918							
13	Suction Stage Assembly	I	305408921								
14	Pump Case	J	305408901		305408902	305408903	305408904				

<sup>\*</sup> Discharge stage assembly on 2-stage pumps only contain diffuser and necessary hardware

\*\* 2- and 3-stage pumps have (1) intermediate stage assembly; 4-stage pumps have (2) intermediate stage assembly, 5-stage pumps have (3) intermediate stage assembly; 6-stage pumps have (4) intermediate stage assembly


\*\*\* All pumps have one suction stage assembly





## NON-SUBMERSIBLE PUMPS - BOOSTER PUMPS

## MH SERIES: 30/45 GPM

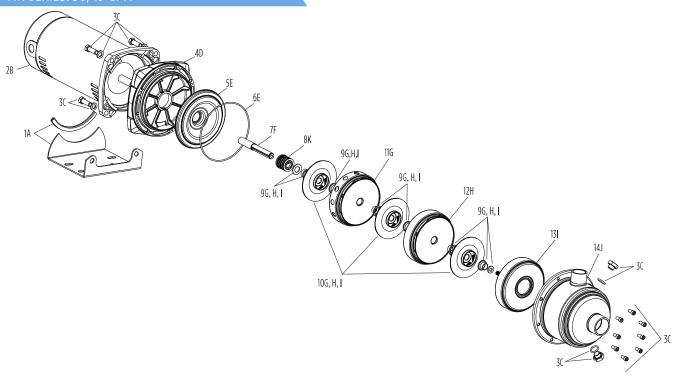

			Repair Part Order Codes By Model No.					
Figure No.	Description	Kit Grouping Identifier*	30MH07S2	30MH1S3	30MH15S4	30MH2S5	45MH15S2	45MH2S3
			2-Stage	3-Stage	4-Stage	5-Stage	2-Stage	3-Stage
1	Base	А	305373901				305373901	
2	Single-Phase Motor	В	305374902	305374907	305374909	305374911	305374905	305374911
Z	Three-Phase Motor	В	305374955	305374956	305374957	305374958	305374957	305374958
3	Fastener Kit	С	Needed fasteners are supplied with kits as required					
4	Adaptor Flange	D	305408907				305408907	
5	Seal Plate	Е	305408906				305408906	
6	O-ring	E	305408906				305408906	
7	Shaft	F	305408908 305408909			305408910	305408912	
8	Mechanical Seal	K	305421906				305421906	
9	Hydraulic Hardware	G, H, I	See Stage Assembly Kits				See Stage Assembly Kits	
10	Impeller	G, H, I	See Stage Assembly Kits				See Stage Assembly Kits	
11	Discharge Stage Assembly	G	305408916	305408914		305408917	305408915	
12	Intermediate Stage Assembly	Н	305408919				305408920	
13	Suction Stage Assembly		305408922				305408923	
14	Pump Case	J	305408901 305408902 3054			305408903	30540	08905

NOTE: 2- and 3-stage pumps have (1) intermediate stage assembly; 4-stage pumps have (2) intermediate stage assembly; 5-stage pumps have (3) intermediate stage assembly; all pumps have (1) suction stage assembly \*Discharge stage assembly on 2-stage pumps only contain diffuser and necessary hardware